


THERMOBILE®

BA 3

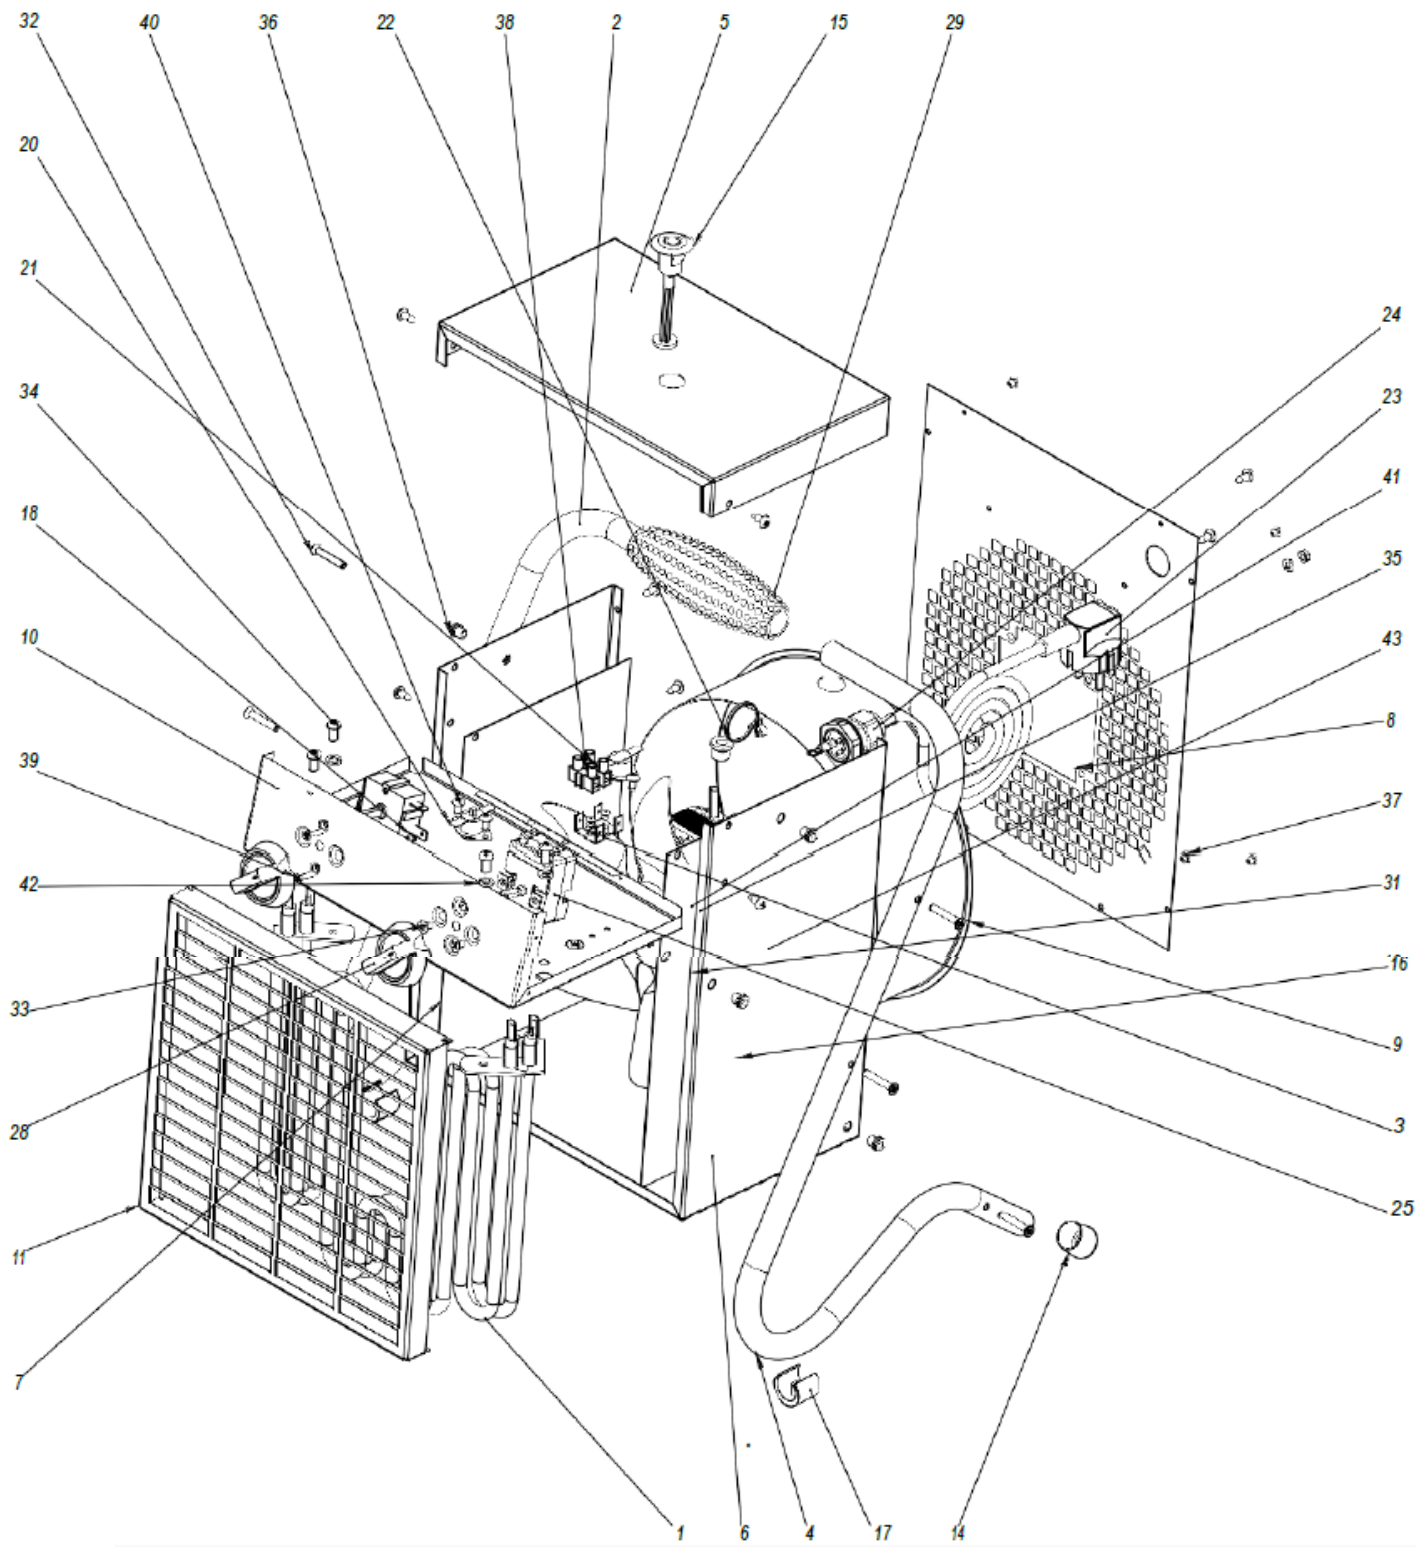

Position	Référence	Désignation	Quantité
1	BA3.11	Résistance	2
2			1
3			1
4			1
5			1
6			1
7			2
8			1
9			1
10			1
11			1
12			1
13			1
14			2
15	BA3.23	Bouton reset	1
16	BA3.37	Ventilateur	1
17			2
18			1
19			3
20			1
21	BA3.8	Thermostat de surchauffe	1
22			1
23			1
24			1
25	BA3.10	Thermostat ambiance	1
26			1
27			1
28	BA3.33	Bouton interrupteur + thermostat ambiance	2
29	BA3.25	Poignée	1
30			1
31	BA3.27	Moteur	1
32			6
33			2
34			4
35			4
36			6
37			8
38			1
39			2
40			12
41			4
42			4
43			4